



- OPTIONAL

INSTRUCTION TO ENABLE THE DRAIN PUMP ON PUSH BYTTON PANEL
CODE 50570-B/C

A) MACHINE PROGRAMMING

To enter programming the machine must not be washing, if you try to enter programming during washing, the message "noPrg" will be displayed and the dishwasher will continue the cycle.

The machine will automatically exit programming if no keys is pressed for about 20 seconds.

- press the keys "Start" and "On/Off" at the same time for about 5 seconds, after which the message "Key" will be displayed;
- set the value of the password to "15" with the keys " \uparrow " " \downarrow ";
- confirm the password pressing the key "Prog"; if the password is correct the parameter choice will be accessed, otherwise the message "Key Err" will be displayed for about 4 seconds.
- select the parameter 22 (drain pump) with the keys " \uparrow " " \downarrow ";
- enter programming of the parameter by pressing the keys "Prog"; SET THE VALUE "1" PUMP ENABLED
- exit programming pressing the key "Esc".

B) DRAIN PUMP ELECTRICAL CONNECTION

- Fix inside the electronic box the expansione board code 50559, connecting the connectors as describe on the wire diagram.
- Connect to the drain pump the alimentation wires prearranged in the harness, numbered 22 and 2 plus earth wire.